 
 
 


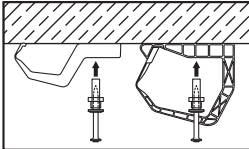


Hilti Corrosion
handbook
/DFTM

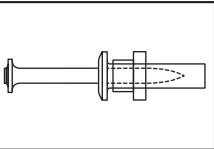

X-ECH-S U37
X-ECH/FR-S U37
X-ECH-M U37
X-ECH/FR-M U37
X-ECH-L U37
X-ECH/FR-L U37

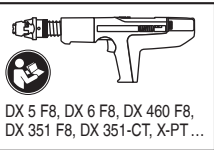

 DX 5 F8, DX 6 F8, DX 460 F8,
DX 351 F8, DX 351-CT, X-PT ...

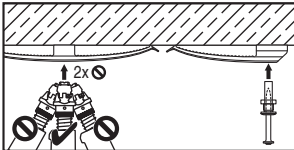

X-EKB 4-FR U37
X-EKB 8 U37
X-EKB 16 U37
X-EKB 8-FR U37
X-EKB 16-FR U37